

SOLLUX SKYLIGHTING

BY LIGHTCORE



INSTALL VIDEO

USER MANUAL

SOL-D06

BRING THE OUTSIDE IN

CONTENT

1.Safe Information	- 1 -
2.Maintenance Mode.....	- 1 -
3.Packing List	- 2 -
4.Installation Steps	- 4 -
1. Open hole	- 4 -
2. Install holding frame	- 5 -
3. Install SOL.....	- 6 -
4. Circuit diagram with control panel	- 7 -
5. Circuit diagram without control panel	- 9 -
6. Install front frame	- 11 -
7. Install Control Panel	- 12 -
5.Control Panel Instructions	- 13 -


1.Safe Information

- Disconnect from the power source before setting up or moving;
- SOL requirements voltage : 90-277V~, 50Hz/60Hz;
- The wall switch of lamps adopts zero-fire wire power supply mode;
- Indoor use, working temperature : -20°C-40°C;
- Ensure reliable grounding of SOL;
- IP20, do not used SOL in very humid environment;
- Make sure the installation location can bear enough weight;
- SOL needs to be installed in a well-ventilated place;
- When moving, mounting SOL, do not apply force on the front of SOL.


2.Maintenance Mode

- If SOL fails to light up normally, you need to call the service phone to notify the manufacturer, and you cannot repair it yourself;
- SOL maintenance needs to be negotiated with the manufacturer and cannot be replaced by non-manufacturer personnel.


3.Packing List

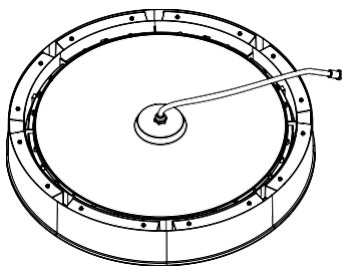


SOL ×1

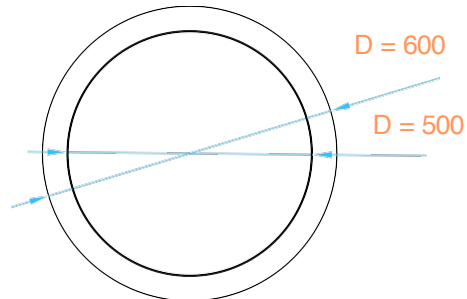


Front view

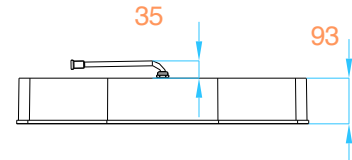


Side view

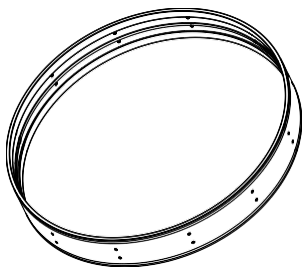


Holding frame ×1

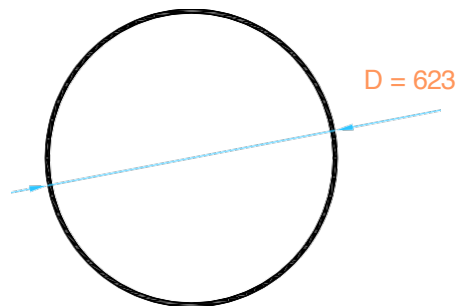


Front view

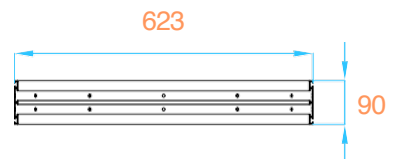


Side view

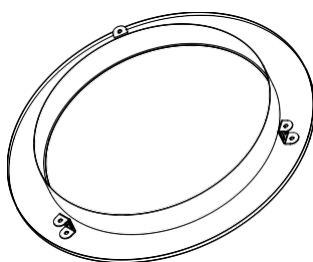



Front frame ×1

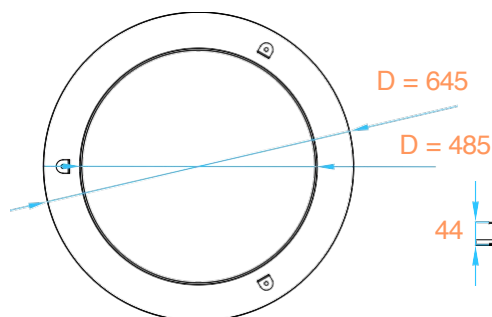


Front view



Side view

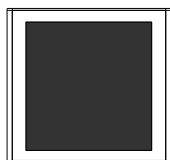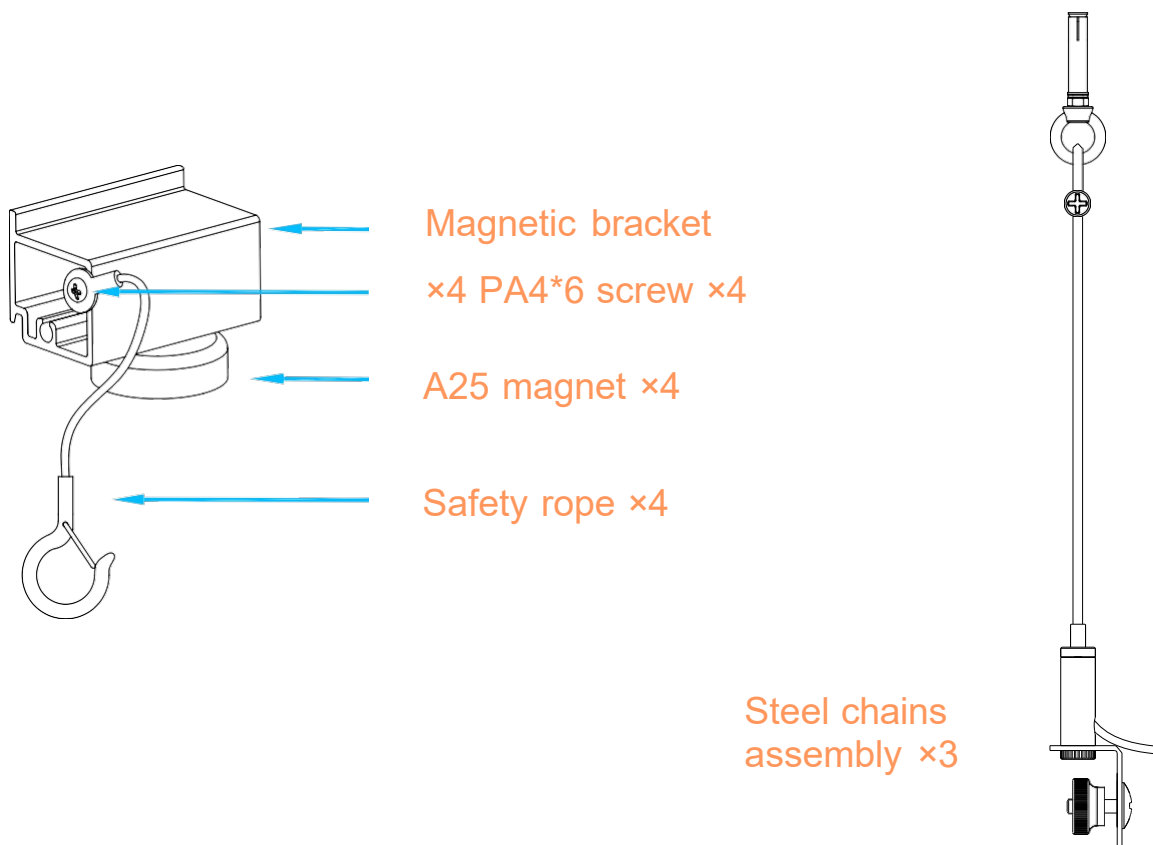


Control panel ×1
(optional)

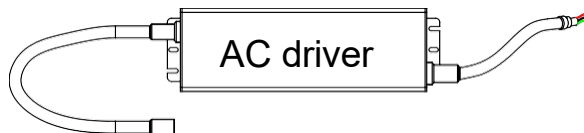


AC driver ×1




Control driver ×1

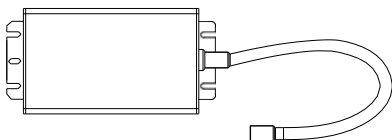

Gateway ×1
(optional)

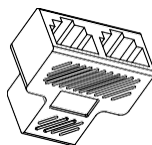

RJ45 Coupler ×1
Control panel connector ×1




Antenna ×1

4. Installation Steps




1. Open hole

- Ceiling to roof distance : $\geq 200\text{mm}$
- Hole diameter: 628mm

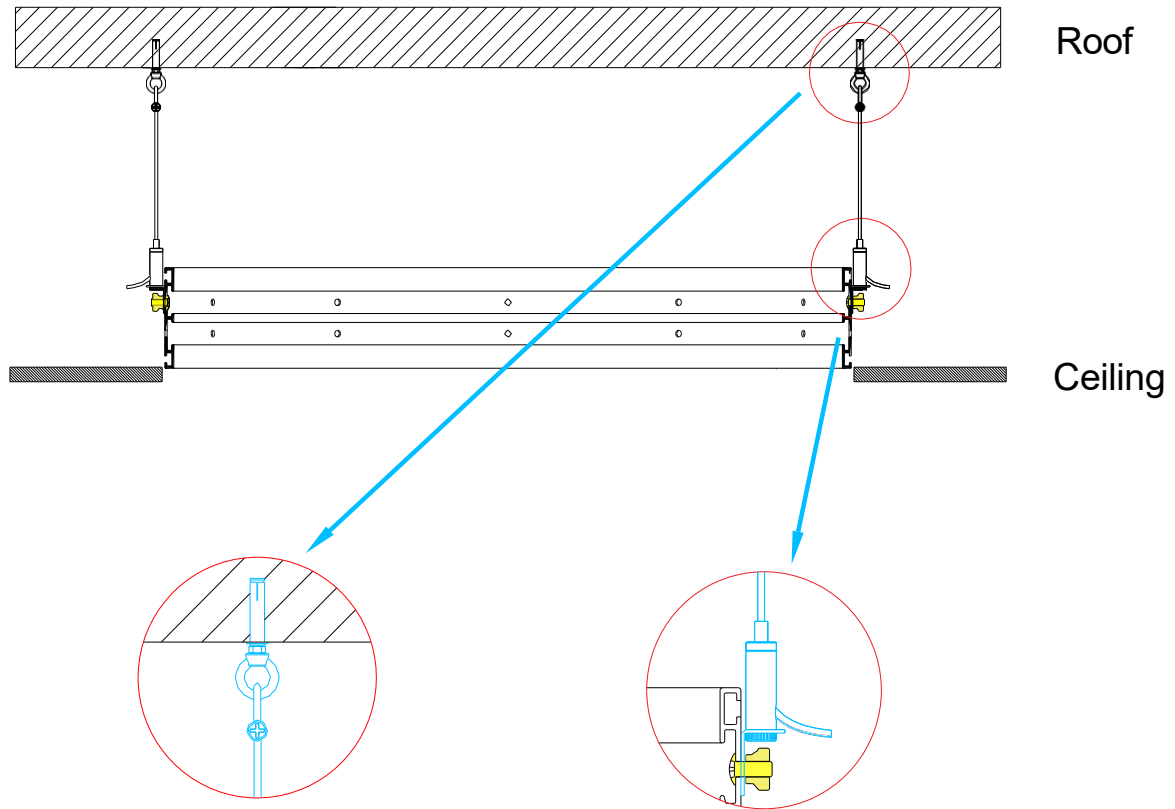

4.2 Install holding frame

- Install three sets of steel chains assemblies evenly around the holding frame, lift the fixed frame through these assemblies, tighten the steel wire rope, and ensure load-bearing.
- 10mm small hole to install M6 expansion bolt

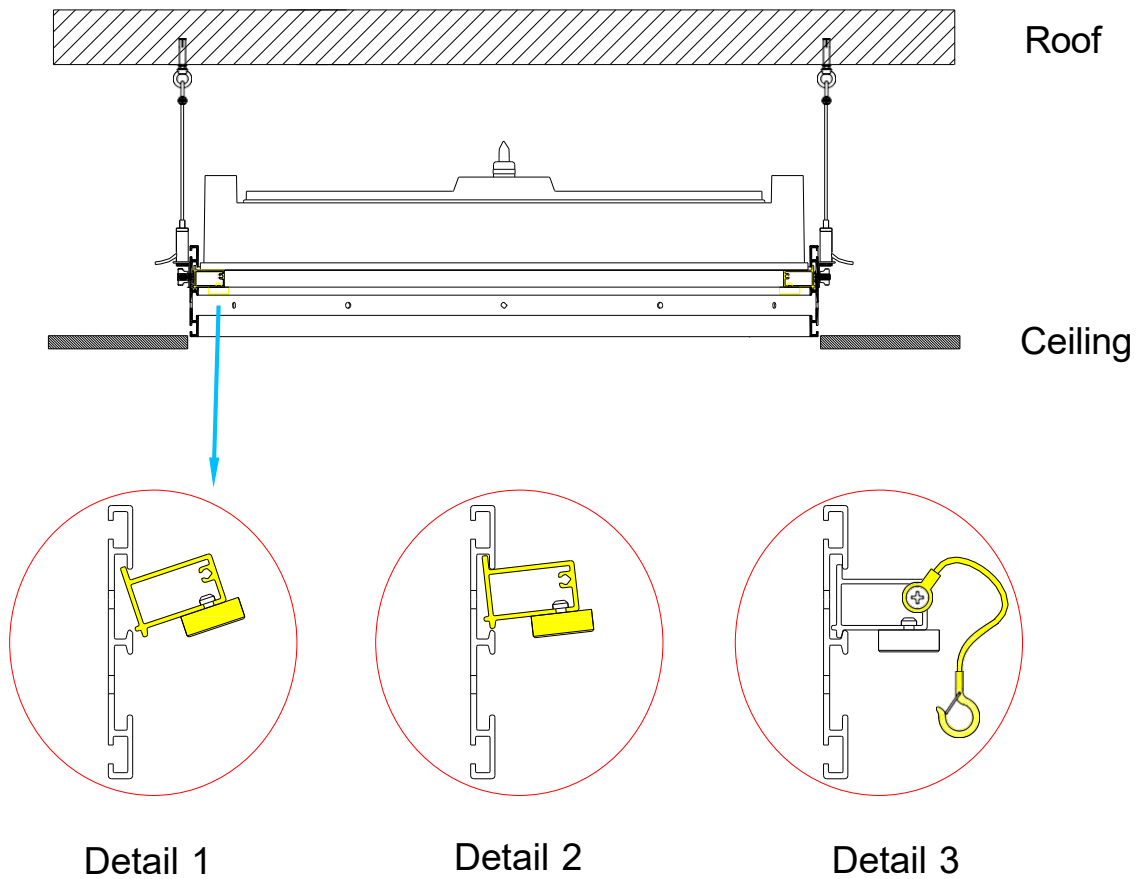


4.3 Install SOL

- Before installing the SOL body, install the power supply in advance, refer to the circuit diagram, step 4.5
- Lift the SOL body high and embed it into the holding frame.
- Insert the magnetic brackets into the slot of the holding frame, refer to details 1 and 2.
- The SOL body falls on the magnetic brackets.


4. Circuit diagram with control panel

1. Wireless mode

- Ö L: live wire N: zero wire FG: ground wire L1: control wire
- Ö L1 is connected to L of AC driver
- Ö Control panel needs to be powered by L and N at the same time
- Ö Antenna is connected to the control driver and erected
- Ö Above 6 SOLs used simultaneously need a diverter.

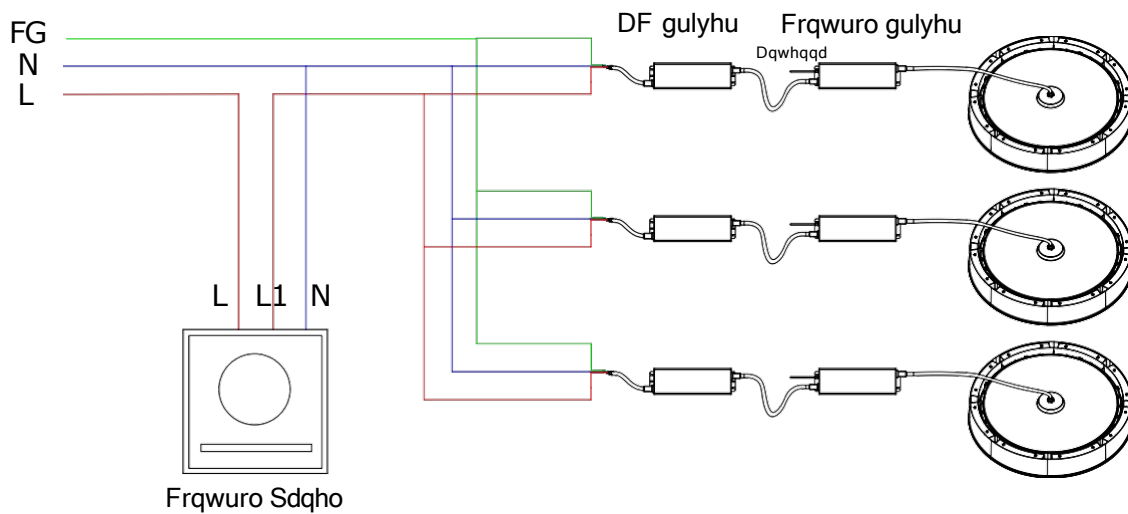


4 SOL

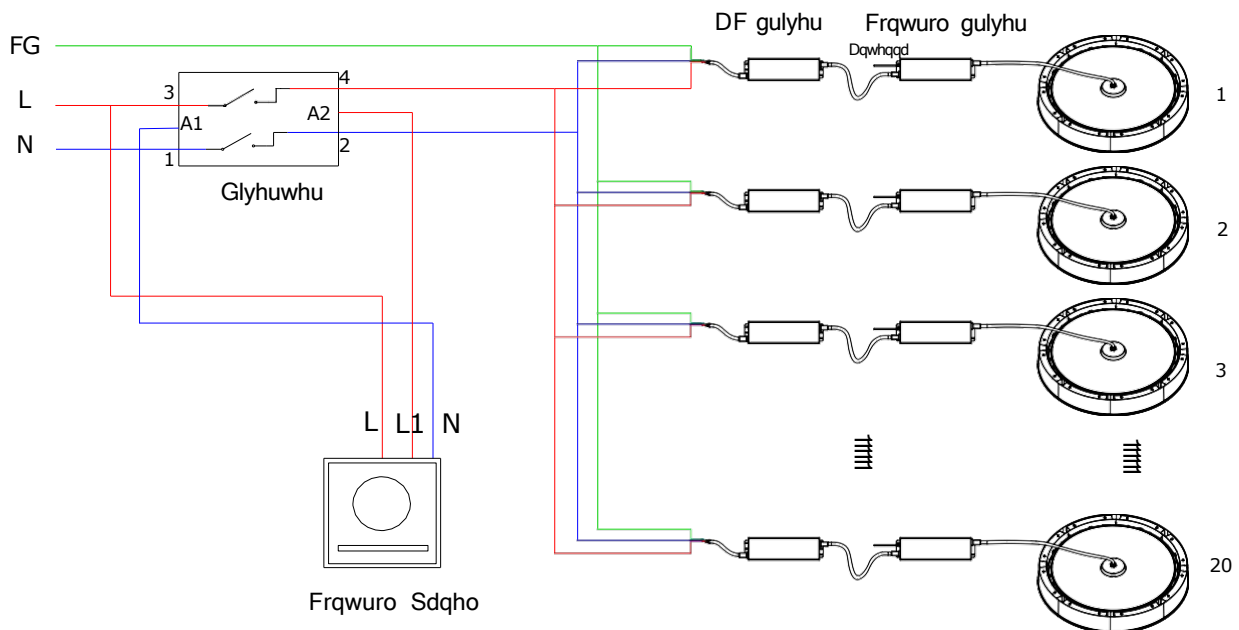

4.4.2 Wired mode


- L: live wire N: zero wire FG: ground wire L1: control wire
- L1 is connected to L of AC driver
- Control panel needs to be powered by L and N at the same time
- Connect Control Panel to Control Driver using Network cables, and multiple uses require RJ45 coupler for conversion
- Antenna is connected to the control driver and erected
- Above 6 SOLs used simultaneously need a diverter.
(Refer to the circuit diagram, step 4.5.1)

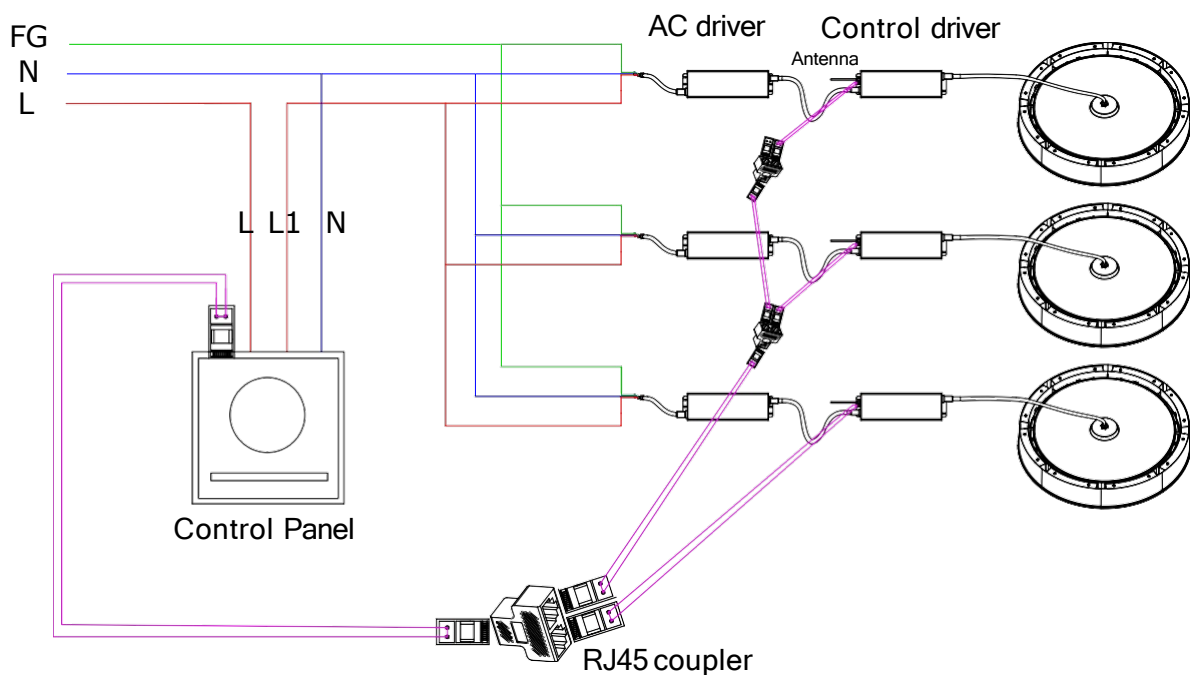

5. Circuit diagram without control panel


1. DALI mode


- Ö L: live wire N: zero wire FG: ground wire
- Ö Connect Control Panel to Control Driver using Network cables, and multiple uses require RJ45 coupler for conversion
- Ö Antenna is connected to the control driver and erected

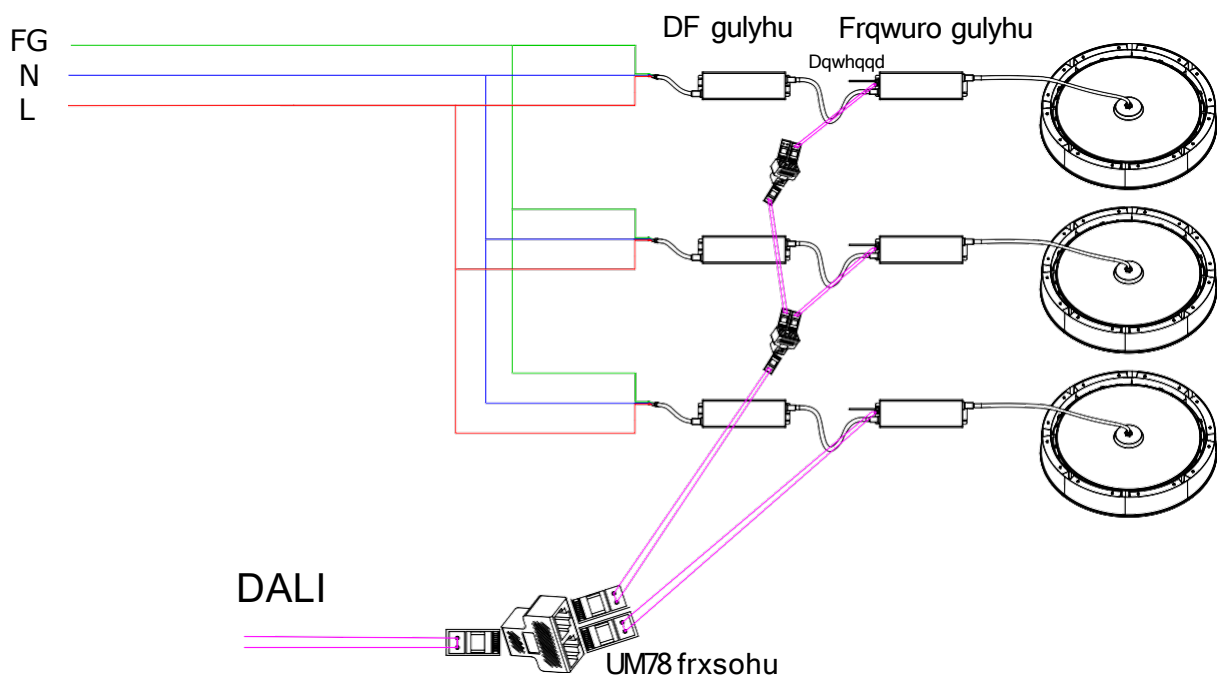

4.5.2 Gateway mode


- Ö L: live wire N: zero wire FG: ground wire
- Ö Connect Control Panel to Control Driver using Network cables, and multiple uses require RJ45 coupler for conversion
- Ö Only one gateway is needed
- Ö Antenna is connected to the gateway & control driver and erected

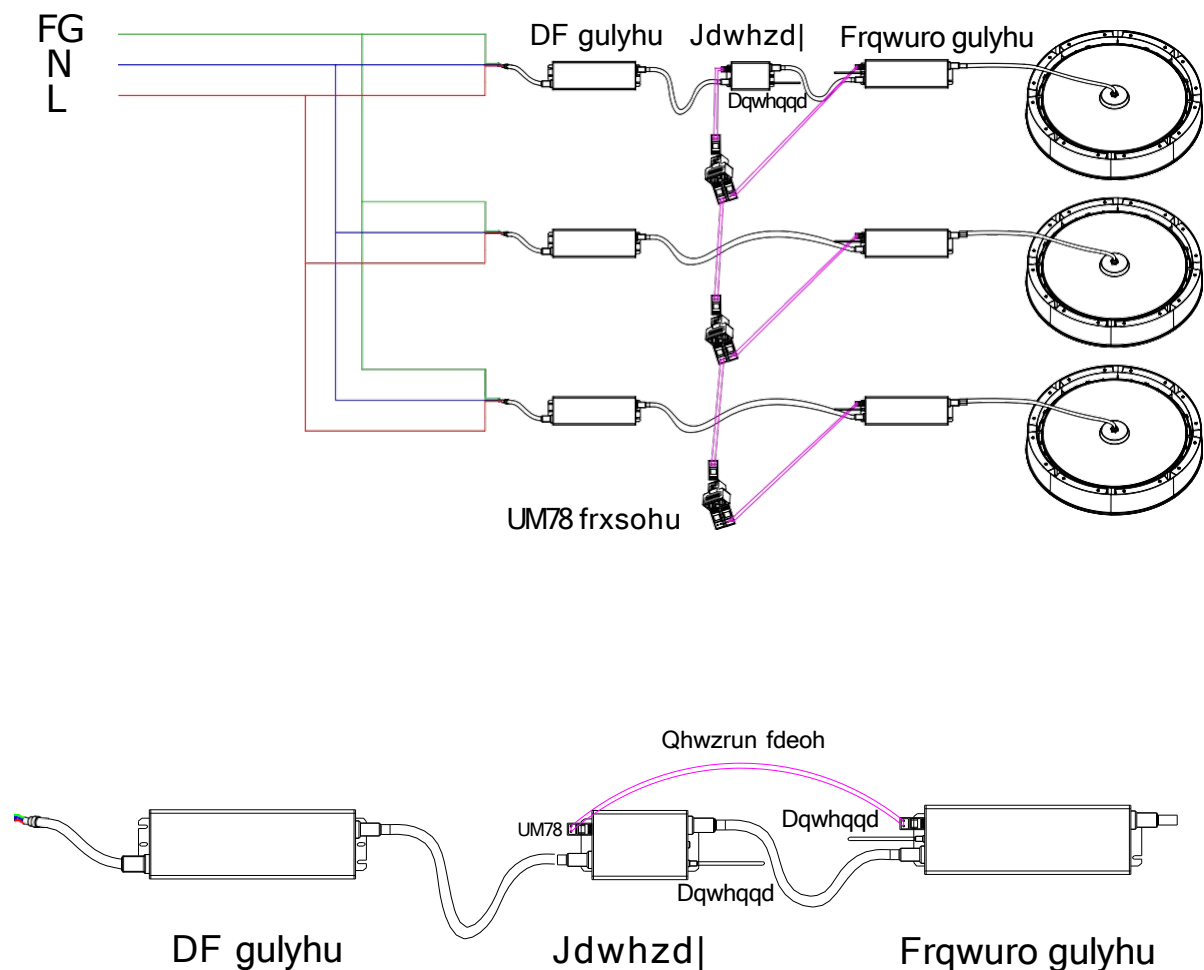

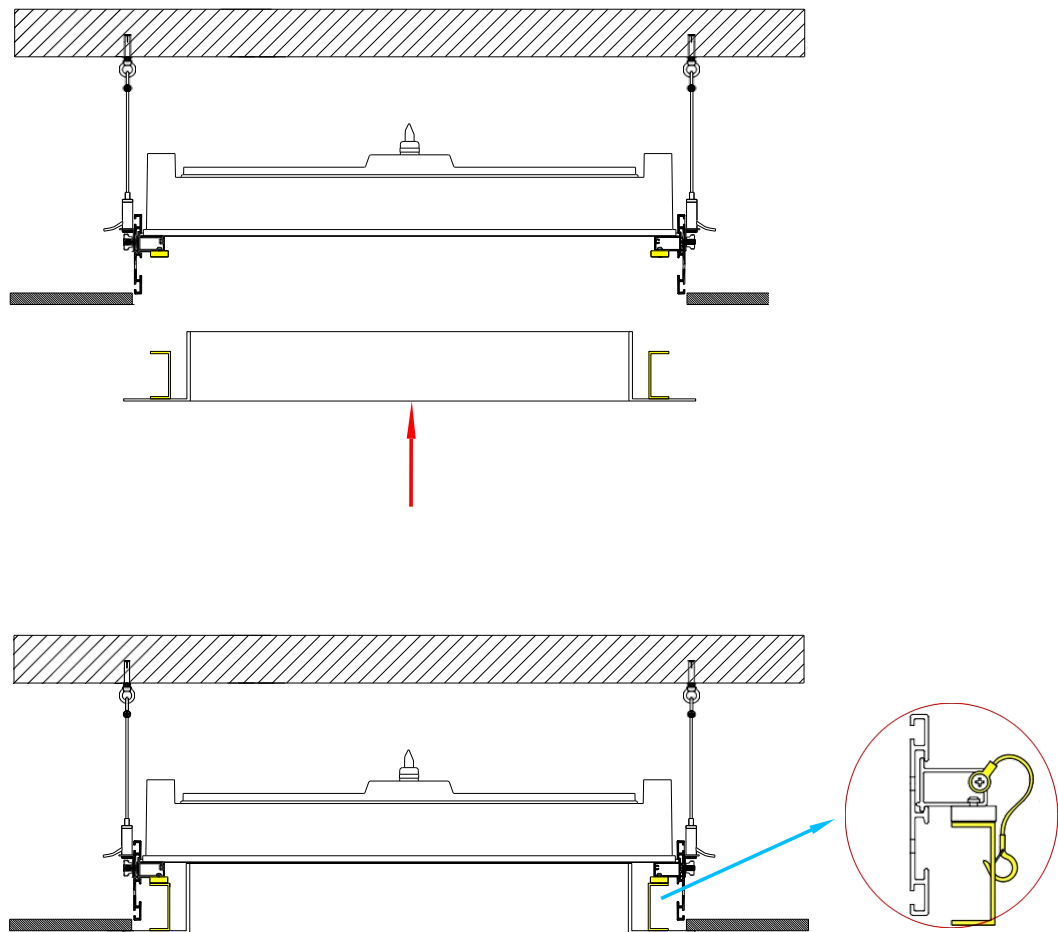


4.6 Install front frame


- Ö Hang the safety rope on the corner of the front frame
- Ö Safety ropes can prevent accidental detachment of the front frame
- Ö Fix the front frame by attracting it with A25 magnets

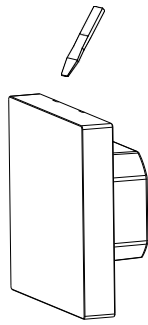


01

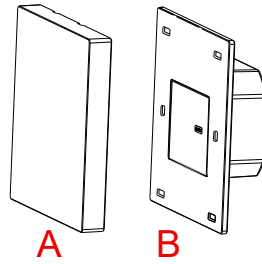


02

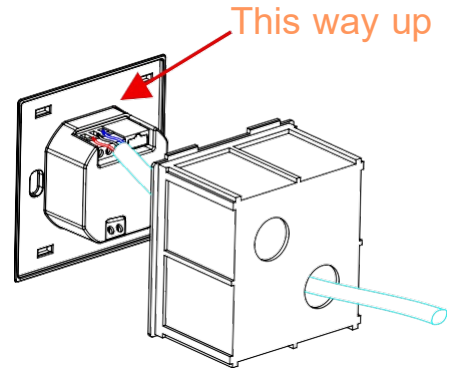


03

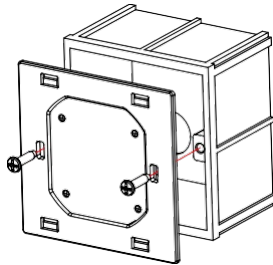

04

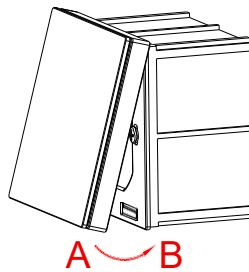

05


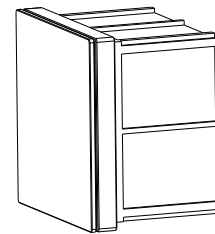


06

4.7 Install Control Panel

- Ö 01/02. Disengage the top latch with a flathead screwdriver and separate the control panel into parts A and B.
- Ö 03. Connect the circuit, both L and N need to be connected to the control panel(B) Orientation: (L & N) up
- Ö 04. Fix the control panel (B) onto the bottom box
- Ö 05/06. Install the control panel (A) onto the control panel (B) and complete the installation

5.Control Panel Instructions

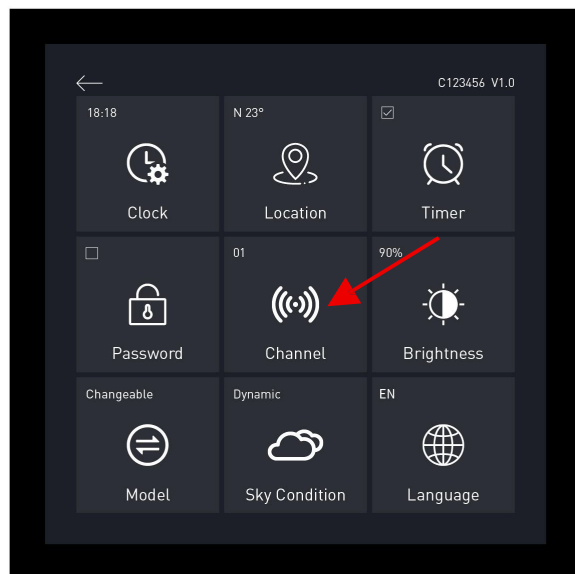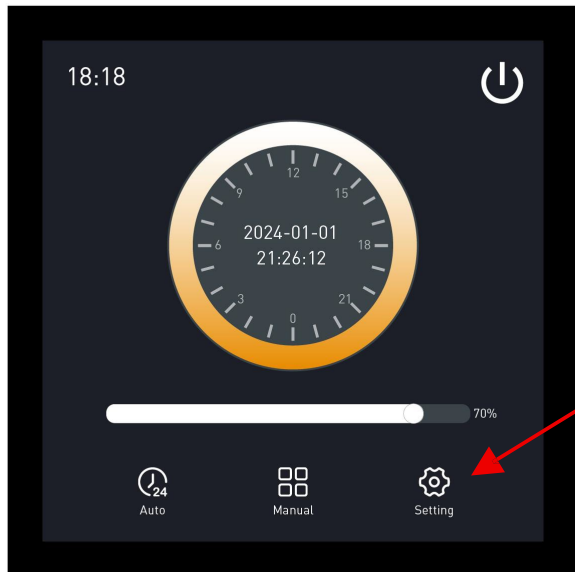

Pair channel to turn on the SOL

- Ö Click on the icon in the bottom right corner to enter the setting interface
- Ö Enter the channel setting interface, select any channel, click save, and turn on the SOL




Auto Mode



Manual Mode

Auto / Manual Mode

- Ö Auto mode, the light can automatically change over time
- Ö Swipe the time icon to quickly adjust the color change. Double click on the internal time of the circle to restore the current time
- Ö Manual mode, customizable lighting
- Ö Four scenarios for quick selection: Morning, Noon, Evening, and Sky. You can also adjust the slider below to customize the lighting

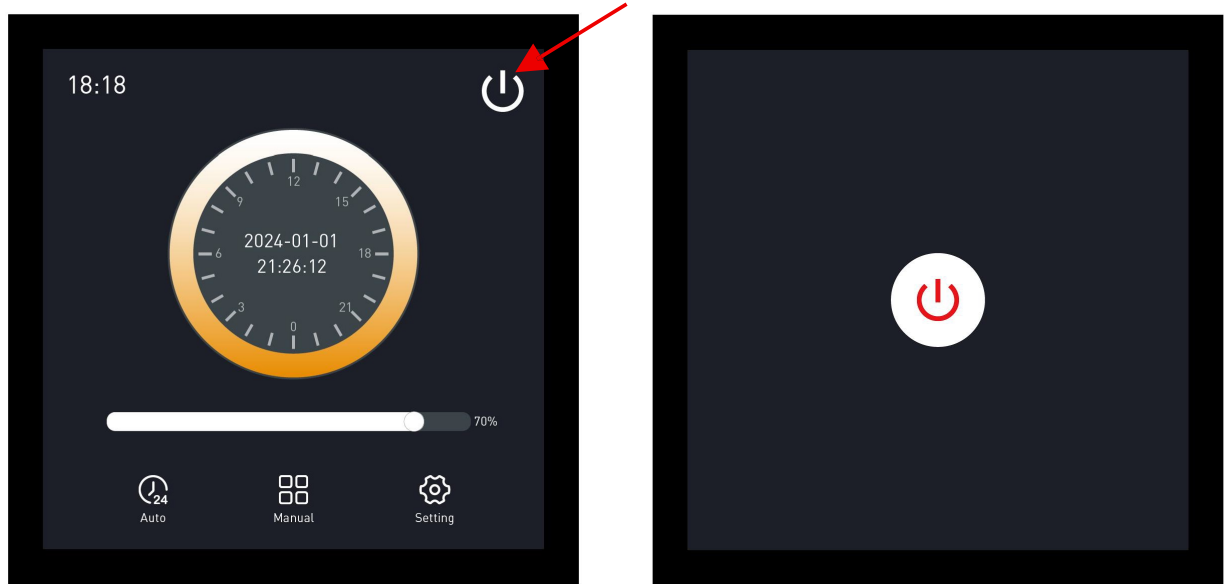


ON / OFF

- Ö Click on the icon in the upper right corner to turn off the SOL, and the control panel will enter the SOL off interface
- Ö Click the switch button to turn on the SOL again


Memory function

- Ö When the mains power remains connected, the time memory function will be maintained, that is, when the automatic mode is turned off, the time will automatically change, and when the manual mode is turned off, the last light off state will be remembered
- Ö When the mains power is disconnected, the time memory function can be maintained for 48 hours. If it exceeds 48 hours, the clock needs to be readjusted.

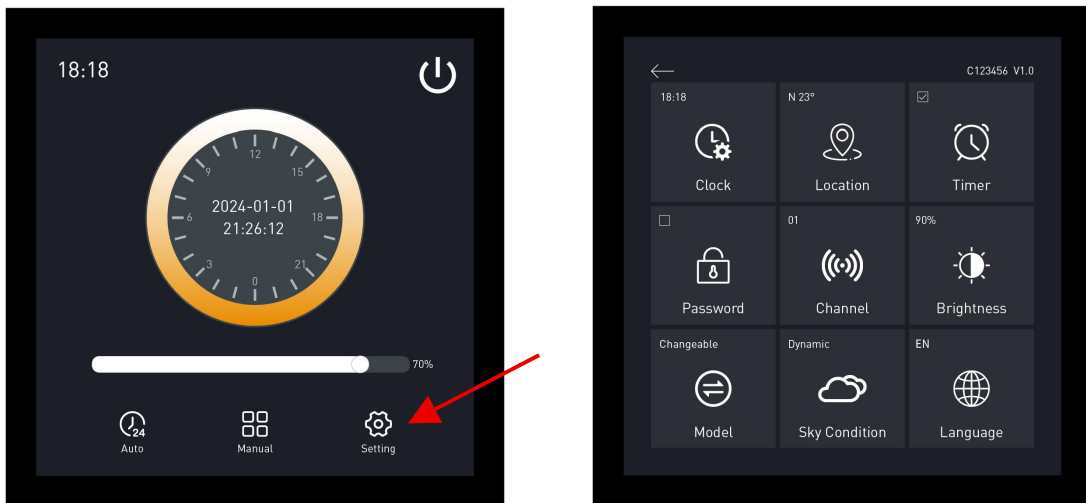

Setting interface

- Ö Click on the icon in the bottom right corner to enter the setting interface

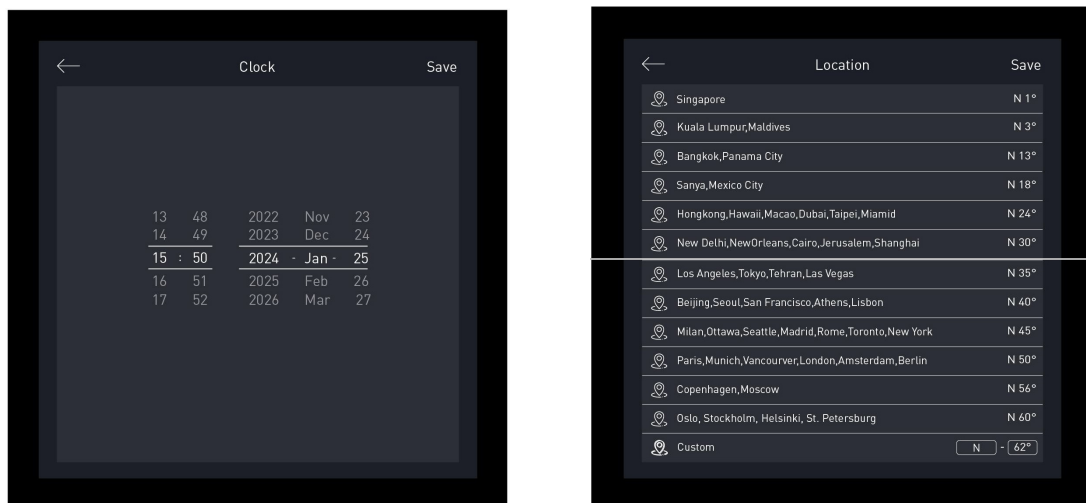

Clock setting


Location setting

- Ö Clock: Adjust the clock and date, or automatically calibrate the clock by connecting to the App
- Ö Location: Choose any location to match the local sunshine, or automatically located by connecting to the App




Timer setting

- Ö Click " + " in the upper right corner to add a timer
- Ö Click " + " in the upper right corner again to add multiple timers
- Ö " 🌞 means that SOL is ON
" 🌙 means that SOL is OFF
- Ö "  Enables the timer function
"  disables the timer function
- Ö Long press option for 3 seconds to delete the timer

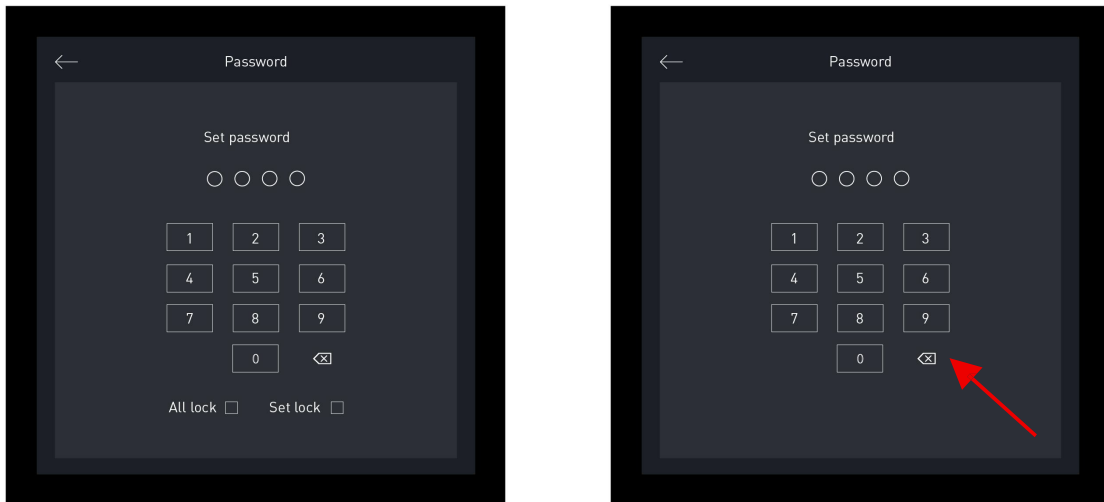


Password setting

- Ö There are two settings to choose from: All lock or Set lock. The default is set lock
- Ö All lock: All interface are locked
- Ö Set lock: Only setting interface is locked while Auto and Manual interfaces remain usable
- Ö Enter a four-digit password. Once set successfully, you can re-enter the password setup menu to modify it.
- Ö Long press the “delete key” for ten seconds to force delete the password.

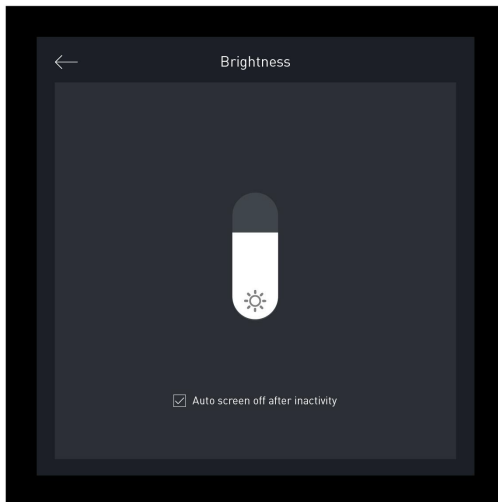


Brightness setting

- Ö Slide the slider to adjust the screen brightness
- Ö Check the ☒, and the screen will automatically turn off after ten minutes without any operation

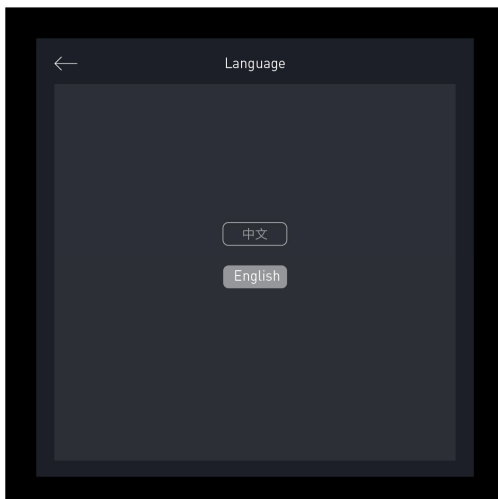


Language setting

- Ö Choose language (Chinese or English)

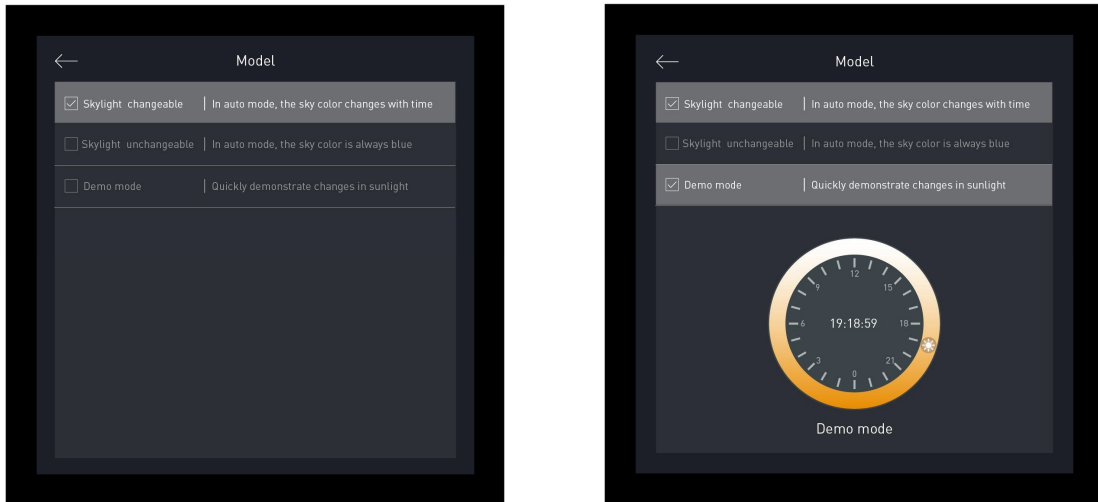


Mode setting

- Ö Skylight changleable and Skylight unchangeable are only valid for the SOL 2.0 product.
- Ö In Skylight changleable, the sky light of the luminaire remains blue and will not change color.
- Ö In Skylight unchangeable, the color of the luminaire's sky light will change with time.
- Ö In Demo Mode, the luminaire will quickly demonstrate the 24-hour light color change within 1 minute. Click again to exit Demo Mode.

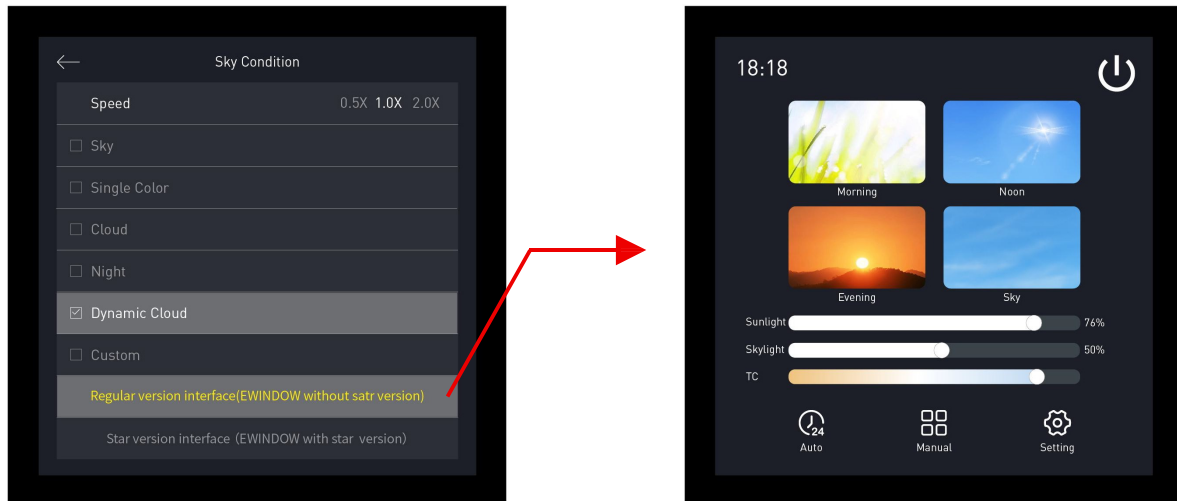

Manual mode interface corresponding to the regular version

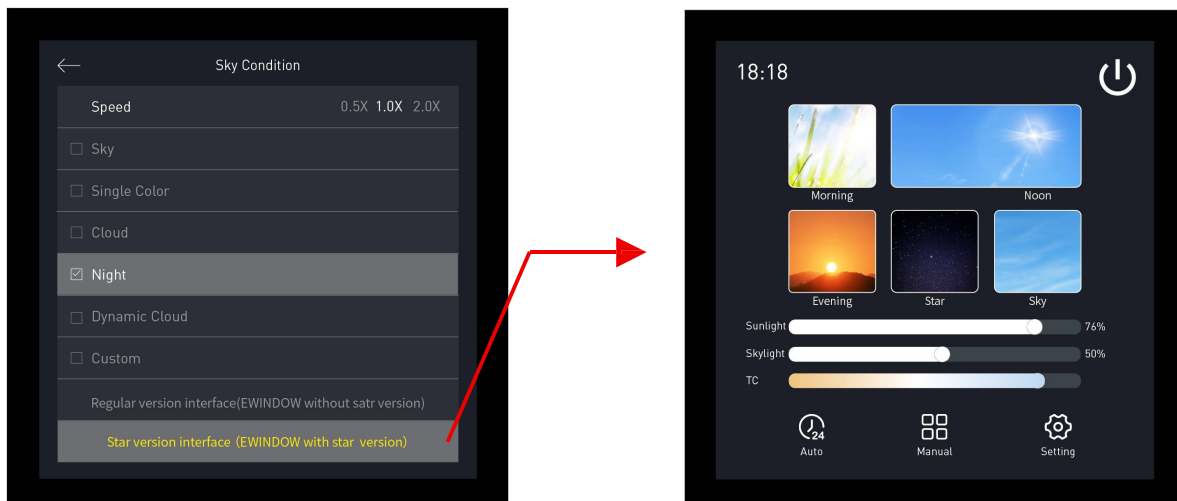

Manual mode interface corresponding to the star version

Sky condition setting

- Ö The sky condition function is only applicable to dynamic cloud version products
- Ö Select any condition to adjust the sky scene
- Ö Add a "star" touch button to the manual mode interface of the star version. The Star Mode needs to be used with "Night" condition.



S  LLUX
SKYLIGHTING

07 2112 6261

HELLO@SOLLUXSKYLIGHTING.COM

WWW.SOLLUXSKYLIGHTING.COM